



DCK ELECTRONIC COMBINATION LOCK

USER INSTRUCTIONS

1. HOW TO OPEN THE DOOR AT THE FIRST TIME

- Your safe is supplied with initial 6-digit code **123456**.
- Type code **123456** and the safe is open.

2. HOW TO CHANGE YOUR PERSONAL CODE AND OPERATE THE DOOR

- To change code you have to **RESET LOCK** as following:
- Door is open position.
- Turn switch behind the door in **OFF** position and turn **ON** again.

A. USING A 6-DIGIT CODE

- Type your new 6-digit **CODE** and press **LOCK** while **DOOR OPEN**.
- The safe is now programmed with your new personal **CODE**.
- To verify new code **LOCK** and **UNLOCK** while door in **OPEN** position.
- To **LOCK DOOR** just **PRESS LOCK** (code not needed to **LOCK**).
- To **UNLOCK DOOR** just type your 6-digit code.

B. USING A CREDIT CARD

- Reset **LOCK** as mentioned above.
- Slide your card from **RIGHT** to **LEFT** and press **LOCK**.
(Black strip facing front and downloads).
- The safe is now programmed with your new credit card **CODE**.
- To verify code **LOCK** and **UNLOCK** while door in **OPEN** position.
- To **CLOSE DOOR** just **PRESS LOCK** (card not needed to **LOCK**).
- To **OPEN DOOR** just slide in your credit card.



C. CHANGE MASTER CODE (Absolutely necessary)

- Your safe is supplied with initial **MASTER CODE 000000**.
- Keep door open position.
- Type **OLD MASTER CODE** and press **CLEAR**.
- Type 6-digit **NEW MASTER CODE** and press **LOCK**.
- The safe is now programmed with **NEW MASTER CODE**.
- You can **UNLOCK** safe either by **CODE/CARD** or **MASTER CARD**.

REPLACE BATTERIES

- Press **BAT** key to check batteries. You will see on the screen message **BA-HI** (=Battery High) or **BA-LO** (=Battery Low).
- To replace batteries open the back panel using a screwdriver.
- Place 4 new alkaline batteries **SIZE AA**.
- Fix back panel in correct position (not to disturb the bolts).
- Lock will also give sound warning if batteries need replacement.

EMERGENCY KEY

- Use key **ONLY** when lock is not working for some reason.
- **UNLOCK** with key.
- While door in open position **LOCK AND REMOVE KEY**.
- Replace batteries if necessary.
- **RESET SWITCH** at the back (**OFF** and **ON**).
- You will see the bolts moving to open position.
- You can now operate the safe normally.